



Source Water Assessment Program (SWAP) Report For Village at Highland Park

What is SWAP?

The Source Water Assessment Program (SWAP), established under the federal Safe Drinking Water Act, requires every state to:

- ? Inventory land uses within the recharge areas of all public water supply sources;
- ? Assess the susceptibility of drinking water sources to contamination from these land uses; and
- ? Publicize the results to provide support for improved protection.

SWAP and Water Quality

Susceptibility of a drinking water source does *not* imply poor water quality. Actual water quality is best reflected by the results of regular water tests.

Water suppliers protect drinking water by monitoring for more than 100 chemicals, treating water supplies, and using source protection measures to ensure that safe water is delivered to the tap.

Prepared by the
Massachusetts Department of
Environmental Protection,
Bureau of Resource
Protection,
Drinking Water Program

Date Prepared:
September 26, 2001

Table 1: Public Water System (PWS) Information

PWS NAME	Village at Highland Park
PWS Address	Highcroft Way
City/Town	Hopkinton, Massachusetts
PWS ID Number	2139007
Local Contact	Fred Hayos
Phone Number	(508) 620-1010

Well Name	Source ID#	Zone I (in feet)	IWPA (in feet)	Source Susceptibility
Well #1	2139007-01G	190	489	Moderate
Well #2	2139007-03G	190	489	Moderate

Introduction

We are all concerned about the quality of the water we drink. Drinking water wells may be threatened by many potential sources of contamination, including septic systems, road salting, and improper disposal of hazardous materials. Citizens and local officials can work together to better protect these drinking water sources.

Purpose of this report:

This report is a planning tool to support local and state efforts to improve water supply protection. By identifying land uses within water supply protection areas that may be potential sources of contamination, the assessment helps focus protection efforts on appropriate best management practices (BMPs) and drinking water source protection measures. Department of Environmental Protection (DEP) staff are available to provide information about funding and other resources that may be available to your community.

This report includes:

1. Description of the Water System
2. Discussion of Land Uses within Protection Areas
3. Recommendations for Protection
4. Attachments, including a Map of the Protection Areas

1. Description of the Water System

The well for the Village at Highland Park is located west of the facility. Each well has a Zone I of 190 feet and an Interim Wellhead Protection Area (IWPA) of 489 feet. The wells are located in an aquifer with a high vulnerability to contamination due to the absence of hydrogeologic barriers that can prevent contaminant migration. Please refer to the attached map of the Zone I and IWPA. The wells serving the facility have no treatment at this time. For current information on monitoring results and treatment and a copy of the most recent Consumer Confidence Report, please contact the Public Water System contact person listed above in Table 1.

What is a Protection Area?

A well's water supply protection area is the land around the well where protection activities should be focused. Each well has a Zone I protective radius and an Interim Wellhead Protection Area (IWPA).

- **The Zone I** is the area that should be owned or controlled by the water supplier and limited to water supply activities.

- **The IWPA** is the larger area that is likely to contribute water to the well.

In many instances the IWPA does not include the entire land area that could contribute water to the well. Therefore, the well may be susceptible to contamination from activities outside of the IWPA that are not identified in this report.

What is Susceptibility?

Susceptibility is a measure of a well's potential to become contaminated due to land uses and activities within the Zone I and Interim Wellhead Protection Area (IWPA).

2. Discussion of Land Uses in the Protection Areas

There are a number of land uses and activities within the drinking water supply protection areas that are potential sources of contamination.

Key issues include:

1. **Inappropriate Activities in Zone Is;**
2. **Landscaping and lawn care;**
3. **Septic systems;**
4. **Stormwater drains/ Catchbasin; and**
5. **Aboveground Storage Tank.**

The overall ranking of susceptibility to contamination for the well is Moderate, based on the presence of moderate threat land use or activity in the IWPA, as seen in Table 2.

1. **Zone Is** – Currently, the well does not meet DEP's restrictions, which only allow water supply related activities in Zone Is. The facility's Zone Is contain the access road into the development, and stormwater drains. The public water supplier owns and controls all land encompassed by the Zone 1. Please note that systems not meeting DEP Zone I requirements must get DEP approval and address Zone I issues prior to increasing water use or modifying systems.

Recommendations:

- ✓ Remove all non-water supply activities from the Zone I to comply with DEP's Zone I requirements.
- ✓ Do not store pesticides, fertilizers or road salt within the Zone I.
- ✓ Ensure that stormwater runoff is directed away from the Zone I.

2. **Landscaping and lawn care** - Fertilizer is applied to the lawn that is located within the IWPA. Fertilizers and pesticides, if improperly applied or stored, can be potential sources of contamination to the water supply.

Recommendations:

- ✓ Do not use fertilizers or pesticides in the Zone I.
- ✓ Use best management practices when applying fertilizer in the IWPA.

3. **Septic systems** - Residential septic systems are located within the IWPA of the wells. If a septic system fails or is not properly maintained it could be a potential source of microbial contamination. Improper disposal of household hazardous chemicals to septic systems is a potential source of contamination to the water

Table 2: Table of Activities within the Water Supply Protection Areas

Potential Contaminant Sources	Zone I	IWPA	Threat	Comments
Access road	Both wells	Both wells	Moderate	Limit road salt usage and provide drainage away from wells
Landscaping & lawn care	No	Both wells	Moderate	Fertilizer and pesticide use
Septic System	No	Both wells	Moderate	See septic system brochure
Stormwater drains	Both wells	Both wells	Low	
Fuel Storage Above Ground	No	Well #3	Moderate	Heating oil for residential use.
Aquatic wildlife	Both wells	Both wells	Low	
Tires	Both wells	Both wells	Moderate	In Zone I, should be removed immediately

* -For more information on Contaminants of Concern associated with individual facility types and land uses please see the SWAP Draft Land Use / Associated Contaminants Matrix on DEP's website - www.state.ma.us/dep/brp/dws/.

Glossary

Zone I: The area closest to a well; a 100 to 400 foot radius proportional to the well's pumping rate. To determine your Zone I radius, refer to the attached map.

IWPA: A 400 foot to ½ mile radius around a public water supply well proportional to its pumping rate; the area DEP recommends for protection in the absence of a defined Zone I. To determine IWPA radius, refer to the attached map.

Zone II: The primary recharge area defined by a hydrogeologic study.

Aquifer: An underground water-bearing layer of permeable material that will yield water in a usable quantity to a well.

Hydrogeologic Barrier: An underground layer of impermeable material that resists penetration by water.

Recharge Area: The surface area that contributes water to a well.

supply.

Recommendations:

- ✓ Staff and residents should be instructed on the proper disposal of spent household chemicals. Include custodial staff, groundskeepers, and certified operator.
- ✓ Septic system components should be located, inspected, and maintained on a regular basis. Refer to the appendices for more information regarding septic systems.

4. Storm Water Catch Basin – Catch basins transport storm water from the roadway and adjacent properties to the ground. As flowing storm water travels, it picks up debris and contaminants from streets, parking areas and lawns. Common potential sources of contamination include lawn chemicals, pet waste, leakage from dumpsters, household hazardous waste, and contaminants from vehicle leaks, maintenance, washing or accidents.

- ✓ Work with the Town to have the catch basins inspected, maintained, and cleaned on a regular schedule. Additionally, street and parking lot sweeping reduces the amount of potential contaminants in storm runoff.

5. Aboveground Storage Tanks (AST) – If managed improperly, Aboveground Storage Tanks can be a potential source of contamination due to leaks or spills of the chemicals they store.

Recommendations:

- ✓ Aboveground storage tanks in your IWPA should be located on an impermeable surface, and also contained in an area large enough to hold the complete liquid volume, should a spill occur.
- ✓ Upgrade all oil/hazardous material storage tanks to incorporate proper containment and safety practices. Any modifications to the AST must be accomplished in a manner consistent with Massachusetts's plumbing, building, and fire code requirements. Consult with the local fire department for any additional local code requirements regarding ASTs.

Implementing the following recommendations will reduce the system's susceptibility to contamination.

3. Protection Recommendations

Implementing protection measures and best management practices (BMPs) will reduce the well's susceptibility to contamination. Village at Highland Park should review and adopt the key recommendations above and the following:

Priority Recommendations:

- ✓ Remove the tires immediately.

Zone I:

- ✓ Keep non-water supply activities out of the Zone I.
- ✓ Consider well relocation if Zone I threats cannot be mitigated.
- ✓ Make sure that road drainage in the Zone I is directed away from the wells.

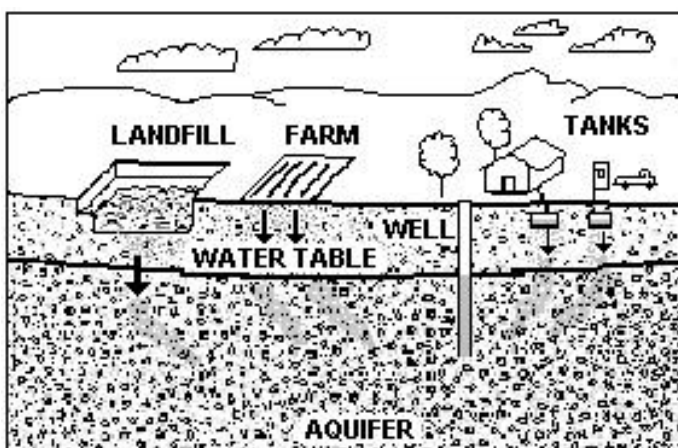


Figure 1: Example of how a well could become contaminated by different land uses and activities.

For More Information:

Contact **Josephine Yemoh-Ndi** in DEP's **Worcester Office** at **(508) 792-7650 x 5030** for more information and for assistance in improving current protection measures.

More information relating to drinking water and source protection is available on the Drinking Water Program web site at:

www.state.ma.us/dep/brp/dws/

Additional Documents:

To help with source protection efforts, more information is available by request or online at www.state.ma.us/dep/brp/dws/, including:

1. Water Supply Protection Guidance Materials such as model regulations, Best Management Practice information, and general water supply protection information.
2. MA DEP SWAP Strategy
3. Land Use Pollution Potential Matrix
4. Draft Land/Associated Contaminants Matrix

Copies of this assessment have been provided to the public water supplier, town boards, the town library and the local media.

Training and Education:

- ✓ Instruct residents on proper hazardous material use, disposal, emergency response, and best management practices; include groundskeepers.
- ✓ Post drinking water protection area signs at key visibility locations.
- ✓ Work with your community to ensure that stormwater runoff is directed away from the well and is treated according to DEP guidance.

Facilities Management:

- ✓ Implement standard operating procedures regarding proper storage, use and disposal of hazardous materials.
- ✓ Upgrade all oil/hazardous material storage tanks to incorporate proper containment and safety practices.
- ✓ Implement Best Management Practices (BMPs) for the use of fertilizer, herbicides and pesticides on the lawns that are located within the IWPA

Planning:

- ✓ Work with local officials in Hopkinton to include the Village at Highland Park IWPA in Aquifer Protection District Bylaws and to assist you in improving protection.
- ✓ Have a plan to address short-term water shortages and long-term water demands. Keep the phone number of a bottled water company readily available.
- ✓ Supplement the SWAP assessment with additional local information and incorporate it into water supply educational efforts. Use a potential contaminant threat inventory to assist in setting priorities, focusing inspections, and creating educational activities.

These recommendations are only part of your ongoing local drinking water source protection. Citizens and community officials should use this SWAP report to spur discussion of local drinking water protection measures.

4. Attachments

- Map of the Public Water Supply (PWS) Protection Area.
- Recommended Source Protection Measures Factsheet
- Your Septic System Brochure
- Pesticide Use Factsheet
- Source Protection Sign Order Form

